

TAB004KL

Includes:

1 – LockVise™ Metal Locking Tablet Holder


Compatibility: This holder ensures compatibility with a wide range of tablets, including the most popular models, from 7"-10.5" in screen size.

Please note the hardware specifications:

- 4 - M4 12mm screws
- 4 - M4 hex nuts
- 1 - T20 torx bit
- 2 - Foam pads
- 1 - Set of locking keys
- 1 - Security knob


1 Modify the Tablet Holder Width

To customize the tablet holder width for your device, loosen the screws positioned at the bottom sides of the holder. After adjusting, tighten the screws to keep the tablet securely in place.

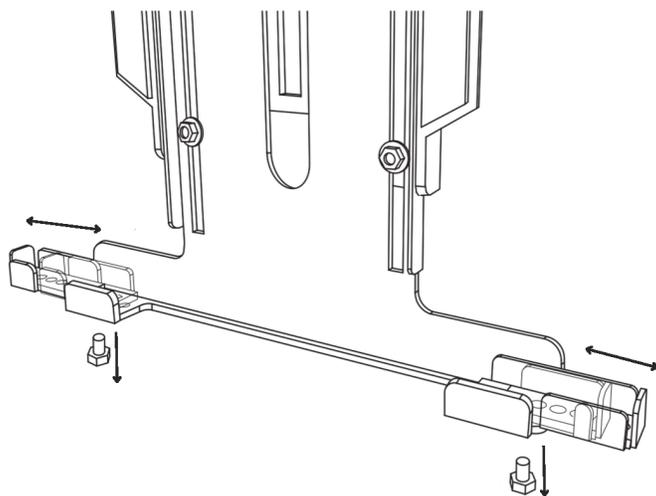


2 Adjusting the Tablet Holder Length

Unscrew the three screws/washers located at the back/center of the holder to modify the height of the tablet holder to match your tablet. Remember to retighten the screws/washers to ensure everything is securely in place.

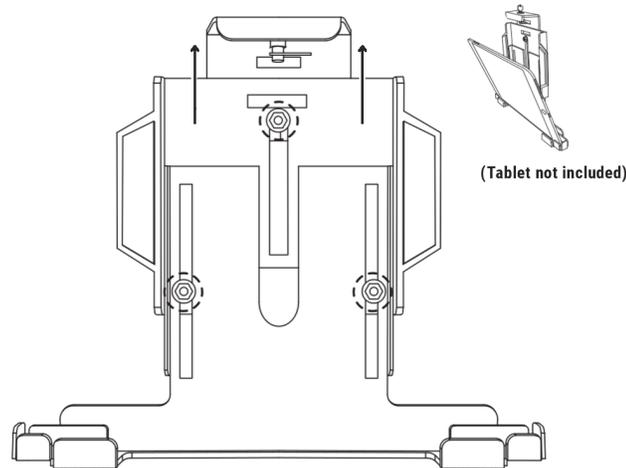


3 Securing the Tablet Holder

To secure the tablet, simply press down on the locking arm located on the top of the tablet and use the included keys to lock it in place.

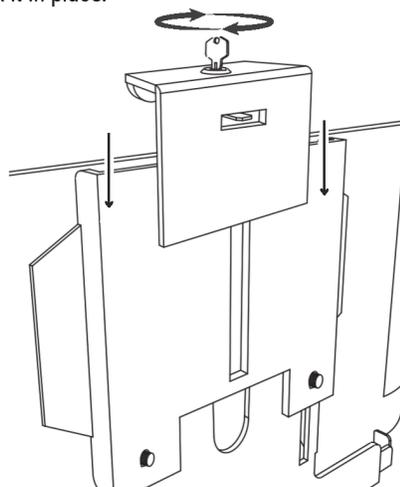

4 Optional - Installing the foam padding if not using a tablet case

To properly set up the tablet holder, apply the foam padding and place it in the sides of the holder.

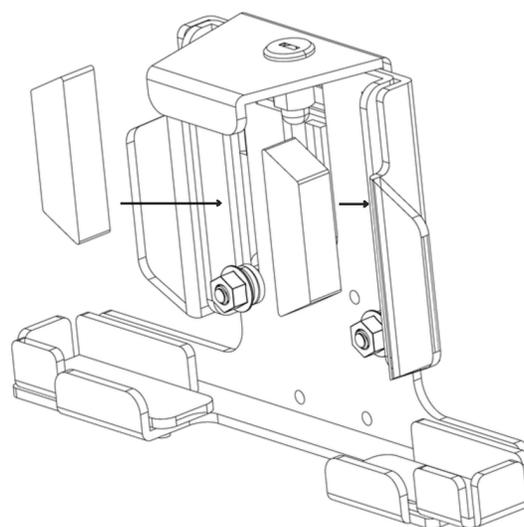

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2



5

Optional - Switch to Non-locking


Take off the nut and washers from the front center of the holder that locks the position of the locking arm.

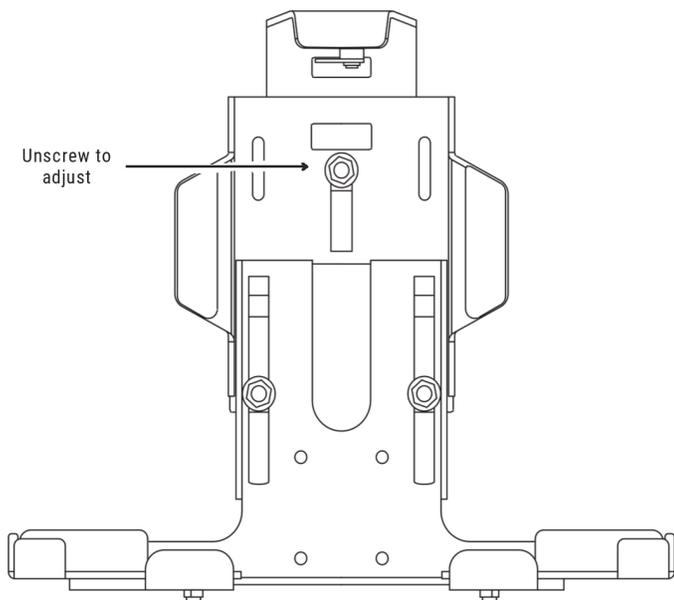

6

Switch to Non-locking


Pull screw out from the back of the locking arm.

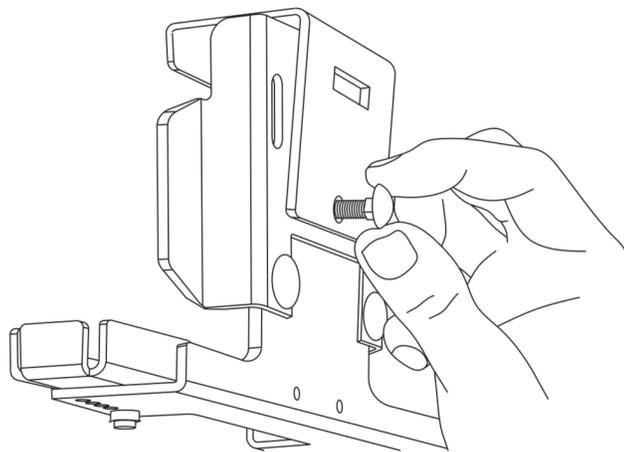

7

Switch to Non-locking


Re-insert screw to the front of the holder going through the locking arm.

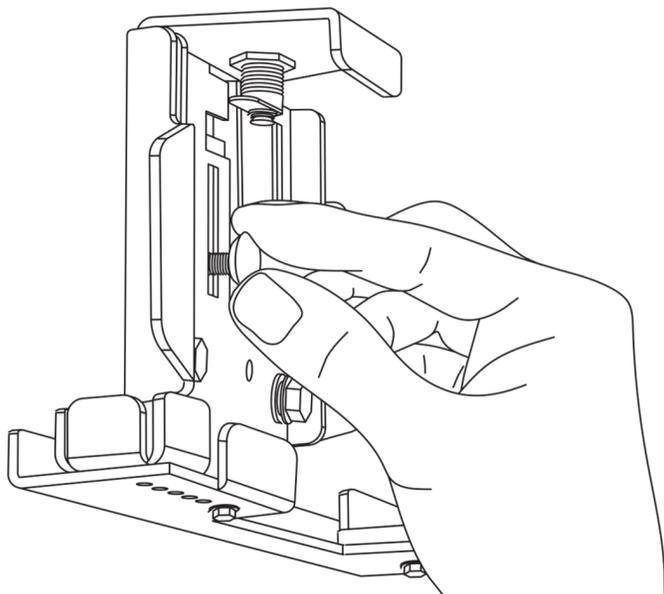

8

Switch to Non-locking

Attach knob to screw on the back of the holder's locking arm.

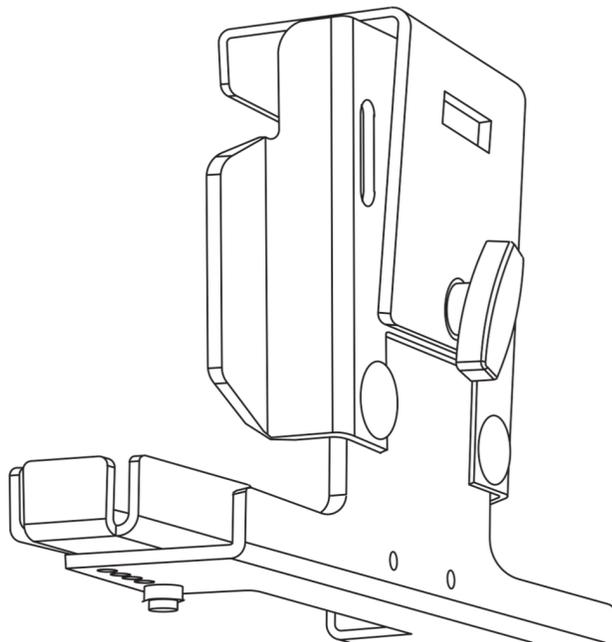

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

