

Includes:

- 1 – Large Barcode Scanner Gun Holster Holder (SPHLSTRXL)
- 1 – Hardware Kit (SP4FLIFT)
- 2 – XMS 38mm AMPS Adapter Plate (APMAMPS38MMAL)
- 2 – 2.5" x 4" Black Steel Forklift Mounting Plate (APFLBKTRC)
- 1 – Robust™ Series 5 inch Metal Mount Shaft (SPRM38MM)
- 1 – Screw cap pack (5) for 3/8 bolts (SPSCPOLT)


This mount includes two steel mounting plates that can be placed on either side of the forklift pillar. To secure the recessed plate to the front of the forklift pillar, use the included recessed plate hardware. At each corner, use the included 3/8-16x4" bolts with washers and nuts to secure the plates.

Each APFLBKTRC steel plate measures 4" x 2.5" x 1/4" (101mm x 64mm x 6mm) and weighs just over 0.5 pounds.

1

Attach the AMPS Adapter to the Mounting Plate


Position the AMPS plate on one of the mounting plates and secure it in place using the screws and nuts included in the hardware kit.

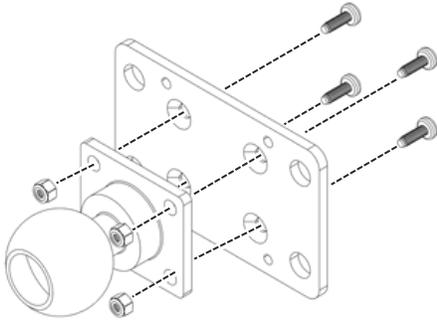

2

Mounting Plate Installation


Position the mounting plates against the designated area. Secure the plates in place while inserting the hardware.

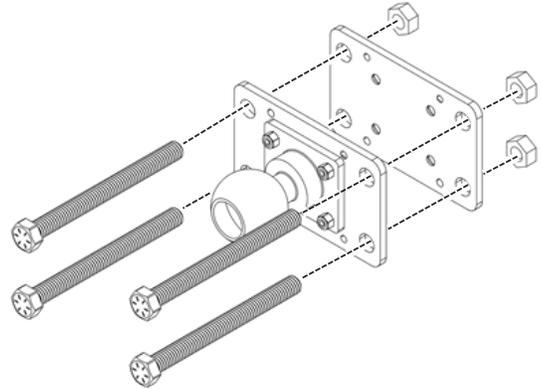

3

Attach the AMPS adapter to the holder


Position the AMPS adapter on the rear of the holster holder, ensuring alignment. Secure the mounting pattern by utilizing the provided hardware.

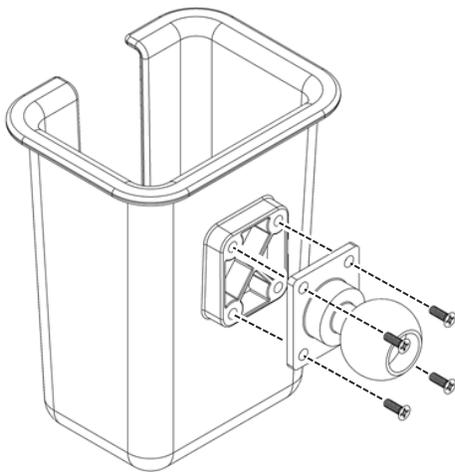

4

Installing the Nuts in the Holster

Put the nuts into the holster. Turn the screws clockwise to fasten them. Complete the installation by using a screwdriver to tighten the screws.

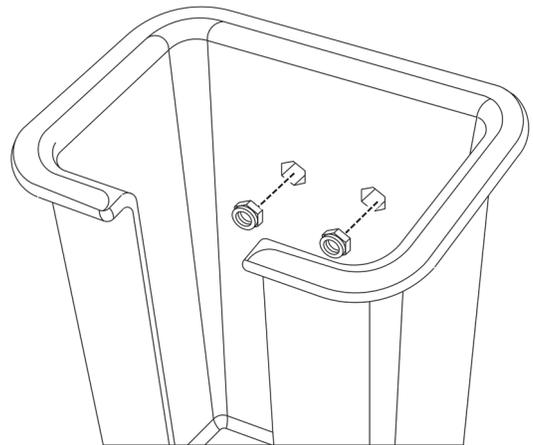

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING


Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2




5 Assemble all components

Begin by turning the shaft arm counterclockwise to loosen it. Then, connect the 25mm ball on each end. Lastly, tighten the shaft to ensure everything is securely in position.

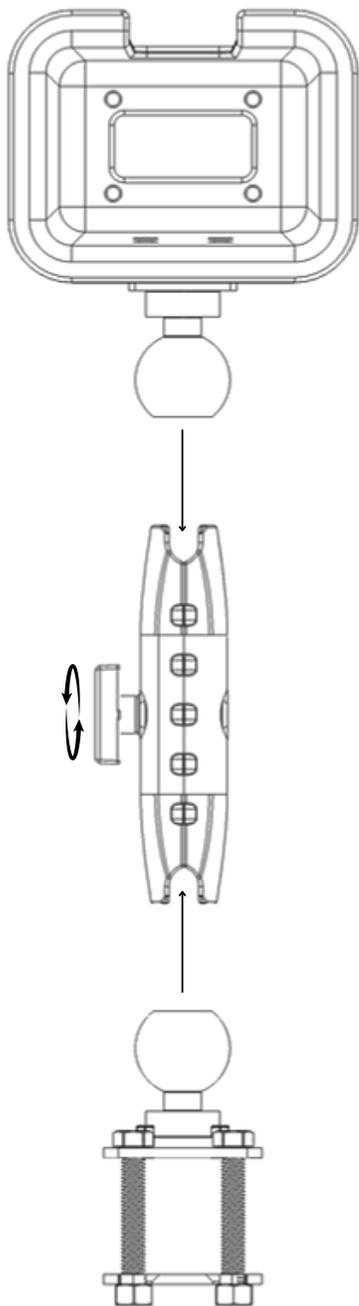

6 Fully Assembled

Refer to the image below for the full assembled product.

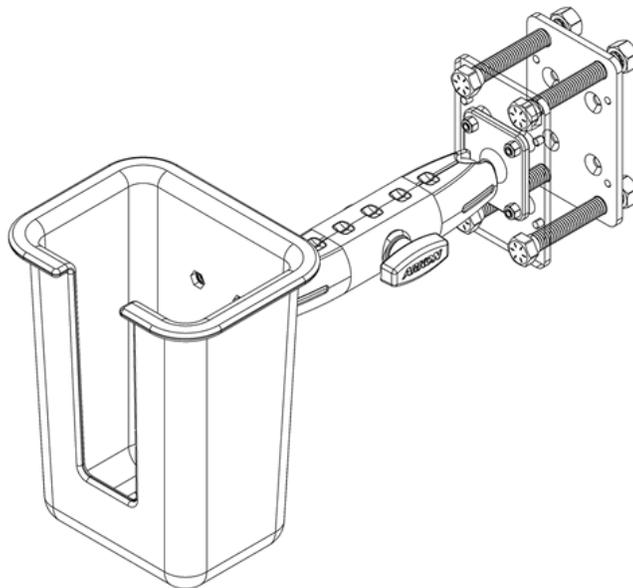

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

