

## Includes:


- 1 – RoadVise® Ultra holder (RVKNAMPS)
- 4 – Screws (M4 x 12mm Phillips Pan Head Machine)
- 3 – 3M Adhesive Strips (a)
- 2 – Foam Pads, Small and Medium
- 1 – Adhesive Pad (b)

**Note:** Avoid over-tightening the knob as it may harm the threads on the holder and make it challenging to adjust.

**Compatibility:** This holder is suitable for smartphones with cases measuring up to 5.71" wide.


## 1 Install the paddings or adhesive strips

For non-MagSafe chargers, use the included foam paddings for a secure fit in the holder. For MagSafe chargers, apply the adhesive strips (a) on the sides of charger for a secure hold. For newer MagSafe charging pucks, use the adhesive pad (b) with the thinner foam to raise the charging surface for better magnetic contact.

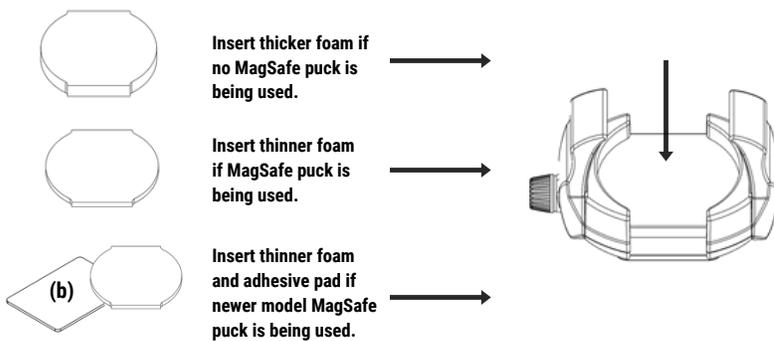


## 2 Attach an AMPS adapter to the holder

Position a compatible AMPS adapter so that it aligns with the holes at the back of the holder. Utilize the provided screws to secure it in place within the holder.

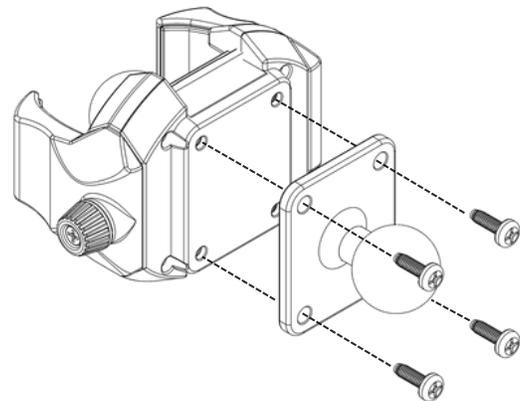


## 3 Modify the holder

To accommodate larger devices, simply rotate the center knob on the holder. This action will securely lock the non-spring loaded arm in place, providing stable support for your device. Use the adjustment knob to align with your phone's magnetic surface for proper charging contact.

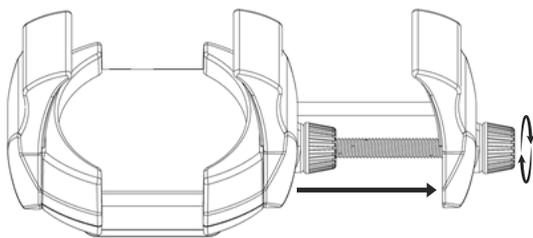

## 4 Install the device

To install your device in the holder, fully expand the spring-loaded arm to create space. Gently insert your smartphone or tablet, ensuring it is centered. Then, slowly release the arm to grip your device securely.

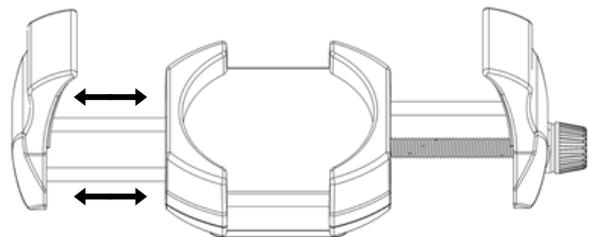

### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

### WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

