

Includes:

- 1 - Slim-Grip® Ultra Holder with Support Legs (SM060-2)
- 1 - 22" Gooseneck Seat Rail Pedestal (GN088-L22-SBH)

Important: Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

Compatibility: This holder is suitable for smartphones with cases measuring up to 7.25" tall.

Please note the SM060-2 packaging includes:


- 5 - Support Stoppers (SP-SM65PK) - Optional

Seat Rail Kit Hardware Specifications:

- 1 - Metal conduit (SPCONDUIT) - Optional
- 1 - Floor mounting bracket
- 4 - Phillips rounded heads screws (18-8 Stainless Steel, M4.2 Screw Size 25mm Long)


1 Option 1 - Attaching the Passenger Seat Bolt

(a) Start by using a socket wrench to loosen the bolt on the passenger seat track. (b) Next, insert the bolt bracket for the seat track. (c) Lastly, ensure that the seat track bolt is tightened securely.

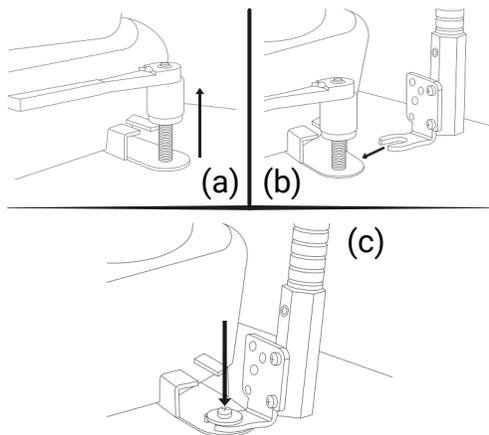


2 Option 2 - Floor Mounting

(a) Attach the floor mounting bracket to the mount, adjusting its orientation as necessary for your vehicle. (b) Next, secure the floor mounting bracket using the screws included in the packaging.

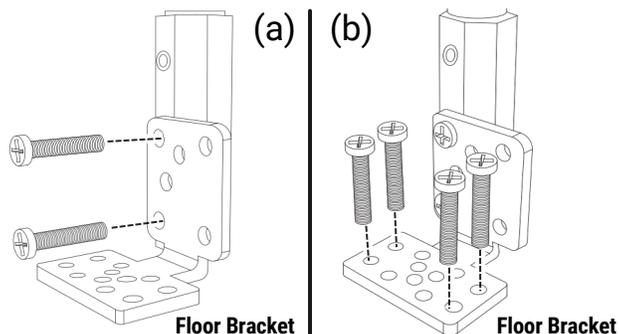


3 Install the Dual T-Tab Adapter into the Holder

Install the Dual T-Tab adapter by inserting it into the slot located behind the holder. Then, slide the adapter upwards to ensure it is securely in place.

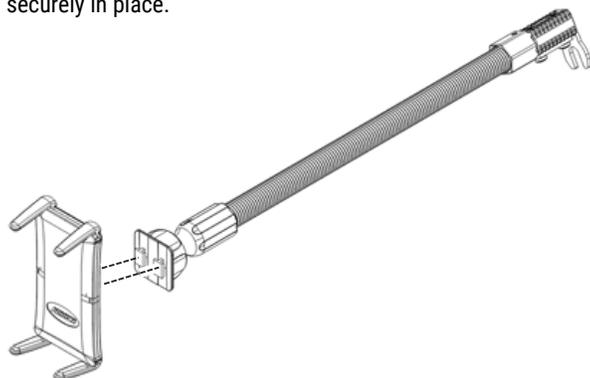

4 Installing the legs to the holder

Install the support legs required based on the recommendations listed above. Slide the support legs into the holder's support leg channels.

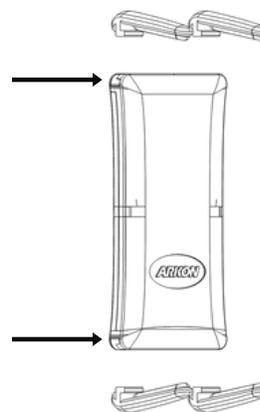

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING


Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2

5

Extend the spring-loaded mechanism


To extend the legs, insert one end of the phone into the bottom support legs.

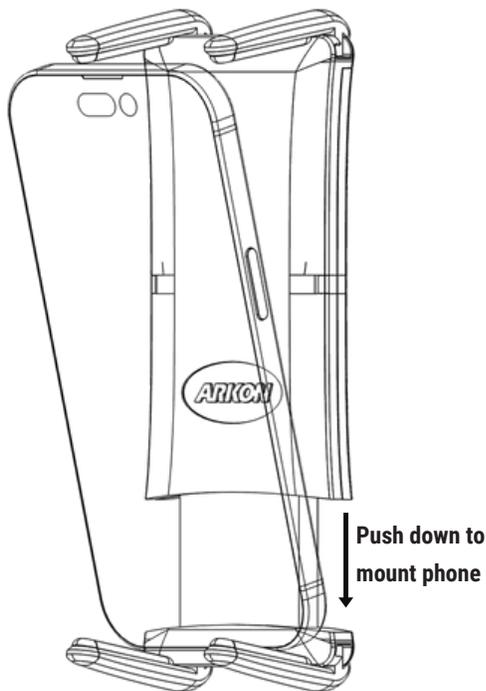

6

Install the phone


With the holder's spring-loaded support legs expanded, lay the phone flat on the holder.

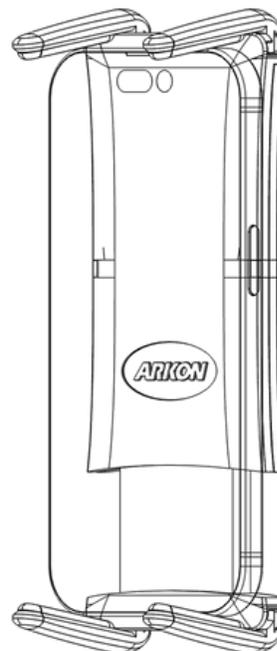

7

Optional Step: Metal Conduit


Attach the included metal conduit to the console to help minimize vibration.

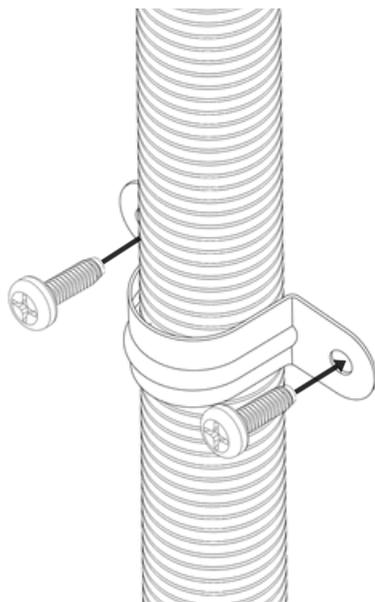

8

Fully Assembled

Refer to the image below for the full assembled product.

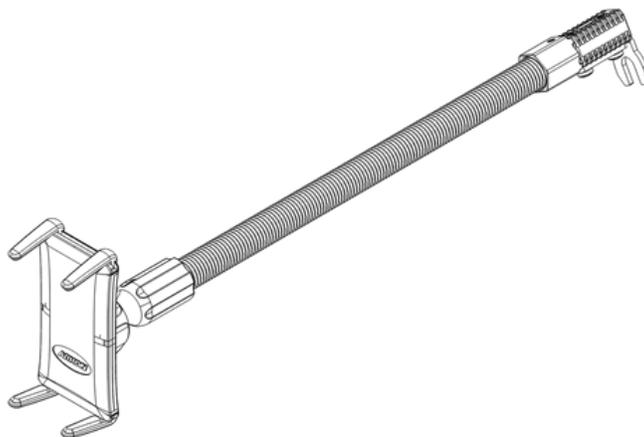

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

