

Includes:

- 1 - Slim-Grip® Tablet Holder with Support Legs (TAB001-AMPS)
- 1 - Drill-Base Mounting Pedestal with 8" Arm (HD006AMPS)


Important: Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

- | | |
|--|--|
| Please note the holder's packaging contents | Please note the hardware specifications |
| 5 - Support Stoppers (SP-TABS5PK) - Optional | 4 - Philips M4 coarse 22mm |
| 10 - Support Legs (SPTAB1FT) | 4 - Philips M4 coarse 26mm |
| 4 - M4 x 12mm Screws (SP-12M-4M7) | 4 - M4 Drill wall anchors 26mm |


Leg selection guide

- Recommended legs to use based on tablet with or without a case
- For tablets size min **6" to 8.25"** max we recommend using 4 small legs
 - For tablets size min **6.75" to 9.12"** max we recommend using 2 small legs and 2 medium legs
 - For tablets size min **8.31" to 10.75"** max we recommend using 2 medium legs and 2 large legs
 - For tablets size min **9.12" to 11.50"** max we recommend using 4 large legs


- 1** **Disassemble the AMPS adapter plate from the pedestal**
To detach one of the AMPS adapters from the drill base pedestal, simply turn one of the end knobs counterclockwise.

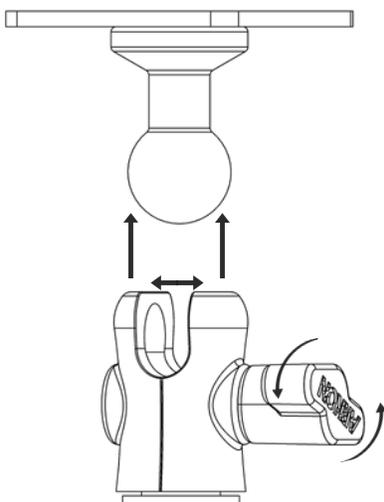


- 2** **Install the AMPS adapter plate to the holder**
Align the AMPS 4-hole adapter on the back of the holder. Then, insert the four mounting screws through the AMPS 4-hole ball adapter plate and into the holder. Finally, secure the screws tightly.

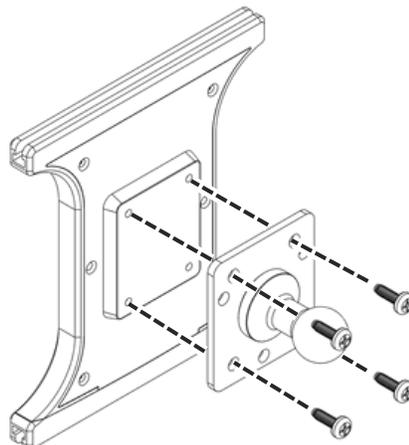

- 3** **Mount Installation**
Utilize the hardware included with the pedestal to securely attach it to the mounting surface. If needed, employ anchors for added stability.

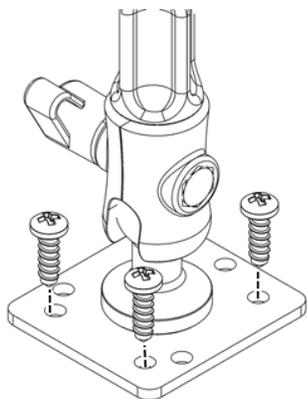

- 4** **Assemble the components**
Attach the 20mm ball from the tablet holder to the pedestal. Finally, tighten the knob to secure everything in place.

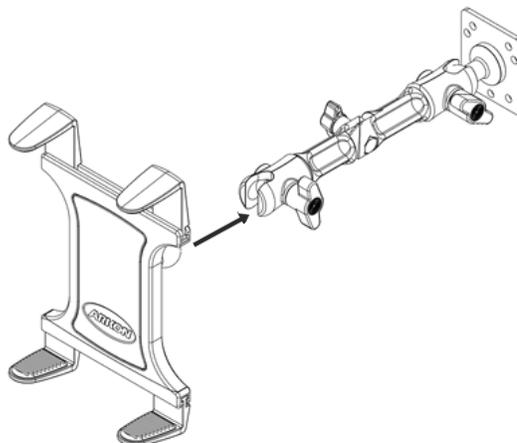

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2



5

Installing the legs to the holder


Install the support legs required based on the recommendations listed above. Slide the support legs into the holder's support leg channels.

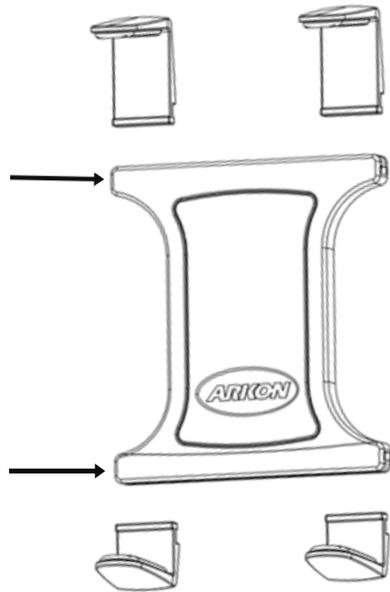

6

Extend the spring-loaded mechanism


To extend the legs, insert one end of the tablet into the bottom support legs.

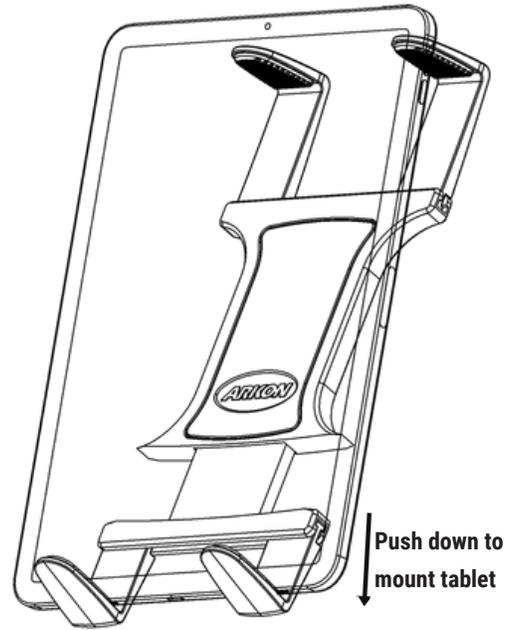

7

Install the tablet


With the holder's spring-loaded support legs expanded, lay the tablet flat on the holder.

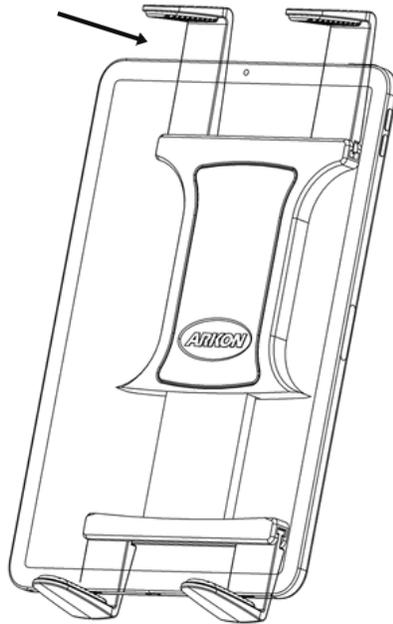

8

Release the tablet to secure

Gently release the tablet into the holder, allowing the bottom spring-loaded support legs to secure the tablet.

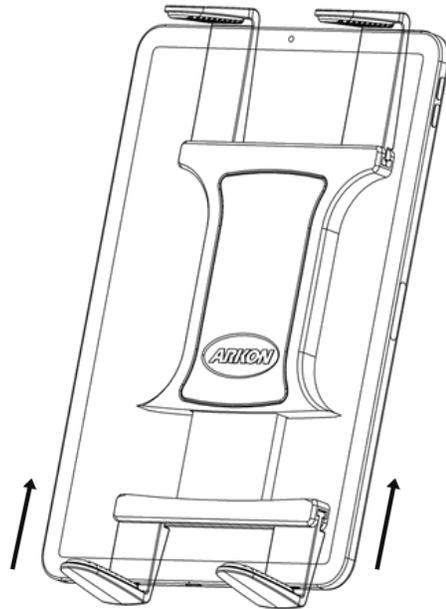

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

