

Includes:

- 1 - Slim Grip Ultra Pro Tablet Holder (TAB006AMPSXL)
- 1 - Double Splitter Bar Plate with Dual Bases (SP080AMPSPLTR02)
- 1 - Robust™ Series 2.75 inch Shaft Arm (SP-RMS250)
- 2 - Metal 4-Hole AMPS to 25mm Adapter (APMAMPS25MM)

IMPORTANT:

To ensure a secure and stable installation, clean the mounting surface area thoroughly by removing all grease, dirt, and debris.

Please note the TAB006AMPSXL hardware specifications:


- 4 - M4 x 12mm Screws (Included)

Please note the SP080AMPSPLTR02 hardware specifications:

- 1 - Double Suction Splitter Bar Plate (APSPLTR0802R)
- 4 - Screws and Nuts (SP-12M-4M7)
- 2 - Suction Cup Bases - AMPS Compatible (SP080AMPSR)
- 8 - Screws (M4 x 12mm Phillips Pan Head Machine)
- 2 - Alcohol Pads (XACP)


1 Assemble the AMPS mount to the tablet holder

Locate the AMPS mount with 25mm ball, the tablet holder, and provided installation screws. Hand tighten the screws to the back of the holder.

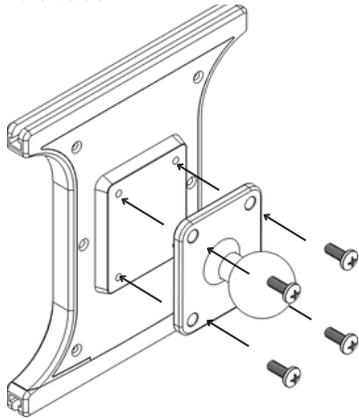


3 Assemble AMPS mount to the double splitter plate

Mount the AMPS mount onto the double splitter plate and align it using the provided hardware.

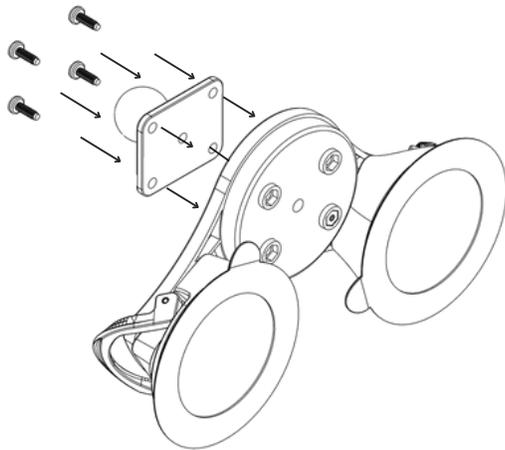

2 Assemble the suction bases to the splitter plate

Install the splitter bar plate onto the suction cups by aligning the holes from the plate with those on the suction cups. Proceed to insert the four mounting screws through the plate and into the bases of the suction cups. To finish, ensure that the screws are securely tightened.

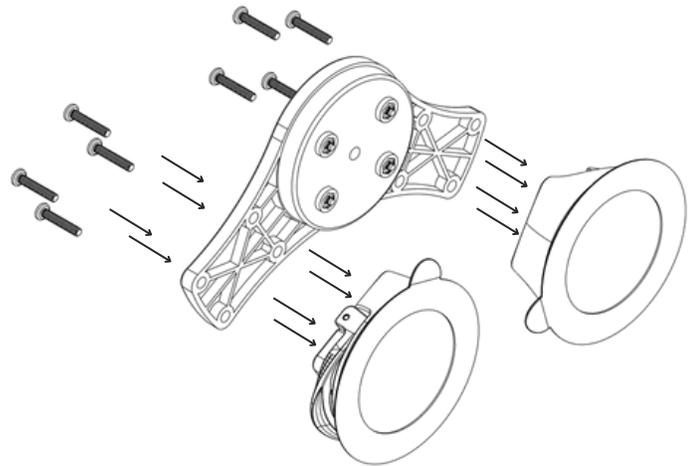

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system


WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2


4 Assemble the components

Locate the 2.75" shaft and turn to the adjustment knob counterclockwise to expand. Insert the 25mm ball ends into the shaft. Turn clockwise to tighten.

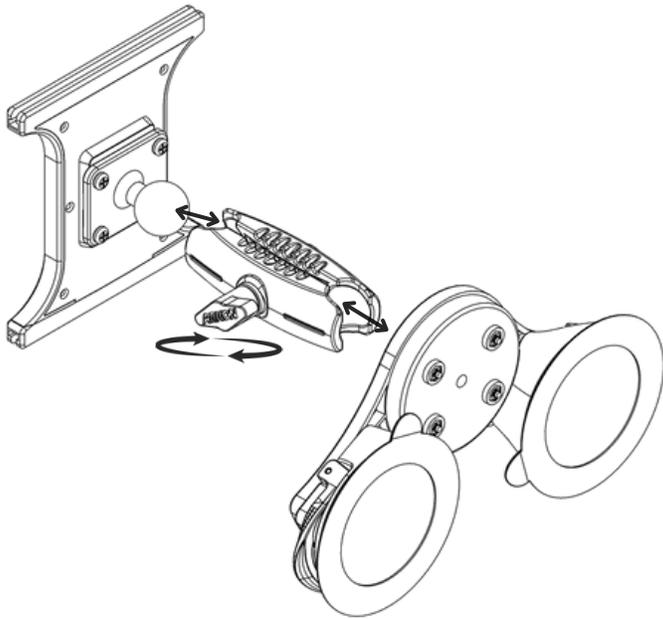


5 Install the suction cups to a surface

Locate a safe flat surface on the dash or console to mount the base. Clean the surface with the provided alcohol pad. Let the surface dry before applying. Remove the clear plastic protective film from the suction base. Push the pedestal suction cup firmly to the surface. Flip the lever down to secure the suction cup.

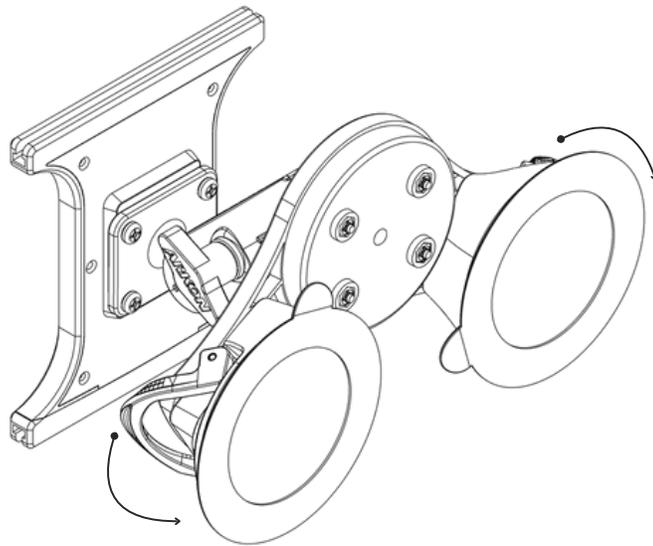


6 Install the legs onto the holder

Place the support legs as recommended. Then, insert the support legs into the designated channels on the holder.

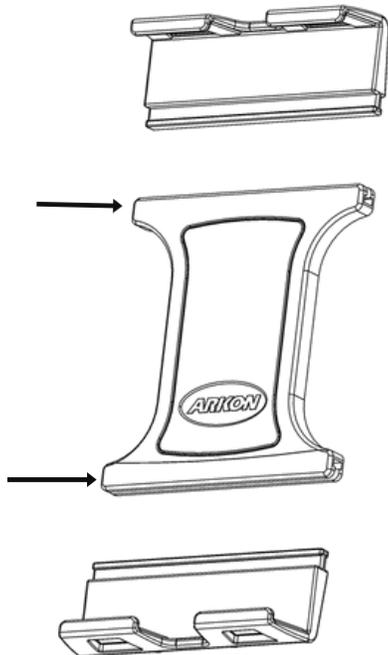

7 Extend the spring-loaded mechanism

To extend the legs, insert one end of the tablet into the bottom support legs.

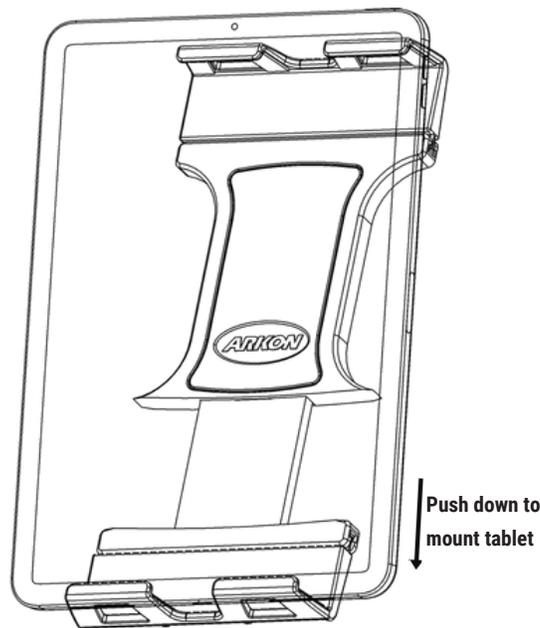

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 3



8

Install the tablet


With the holder's spring-loaded support legs expanded, lay the tablet flat on the holder.

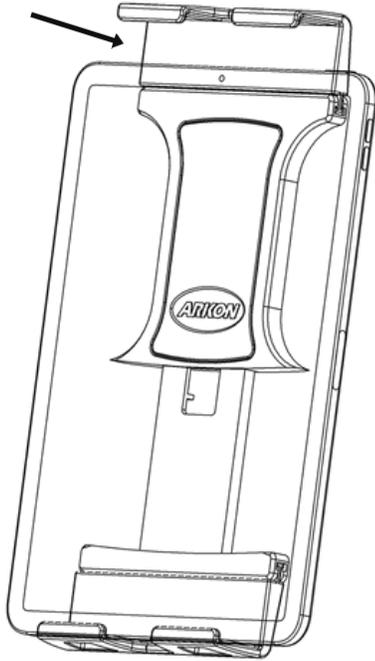

9

Release the tablet to secure

Gently release the tablet into the holder, allowing the bottom spring-loaded support legs to secure the tablet.

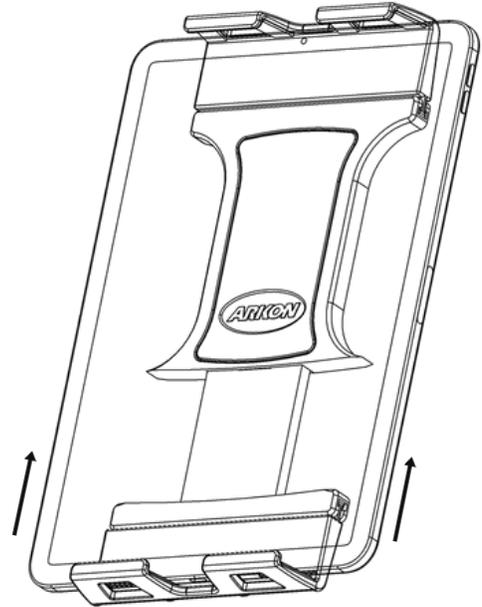

Leg Selection Guide

Choose the appropriate legs based on your tablet size, with or without a case:

- Tablets (**approximately 6.37" to 8.81"**) - Use 2 small legs.
- Tablets (**approximately 7.12" to 9.25"**) - Use 1 long leg and 1 small leg.
- Tablets (**approximately 7.62" to 10"**) - Use 2 long legs.
- Tablets (**approximately 8.75" to 11.12"**) - Use 1 long leg and 1 extra long leg.

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.